For Sales Information Please Contact

RoadTrucker Inc (www.RoadTrucker.com
8312 Sidbury Rd.
Wilmington, NC 28411
(800) 507-0482 / (910) 686-4281

USER'S MANUAL

naxa

13.3" WIDESCREEN HD LCD TV WITH DVD PLAYER

MODEL NO: NTD-1351

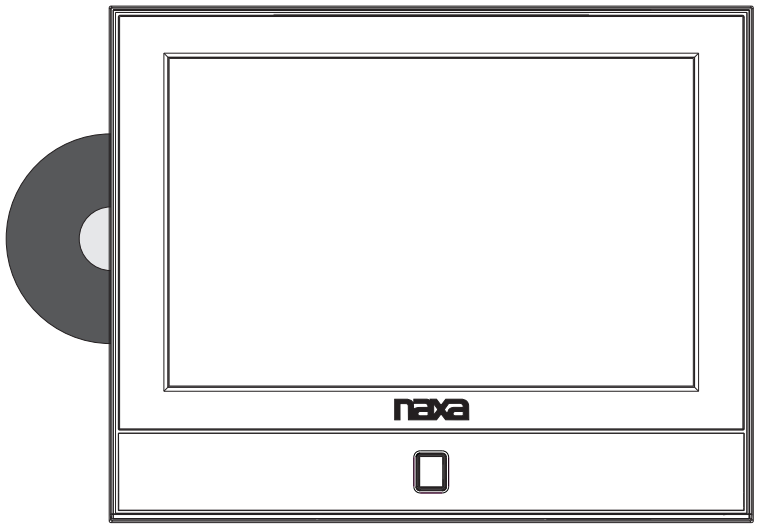

Instruction Manual

PLEASE READ CAREFULLY BEFORE USE

Important Safety Precautions

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.
When servicing use only identical replacement parts.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

This symbol indicates important instructions accompanying the product.

This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

The apparatus must not be exposed to dripping or splashing. Objects filled with liquids, such as vases or drinking glasses, must never be placed on the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

Important Safety Precautions

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984 (Section 54 of Canadian Electrical Code, Part 1) provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrode. See following example.

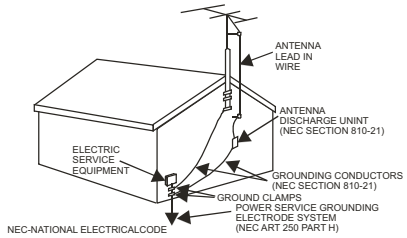
ANTENNA LEAD IN WIRE
ANTENNA DISCHARGE UNINT (NEC SECTION 810-21)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250 PART H)
NEC-NATIONAL ELECTRICALCODE

16. Mains plug is used as the disconnect device. It shall remain readily operable and should not be obstructed during intended use.

Welcome you to purchase LCD TV

Welcome you to high quality image world color LCD TV brings you. We sincerely hope TV brings you the brand new visual and audio enjoyment.
This operating instructions can help you operate this TV set easily.
Read this manual before operating the unit for being familiar with its features and keep it for future reference.

Table of Contents

Introduction
- Features 5
- Accessories 5
- Supporting DVD Format 5
- Specifications 6

General Description 7
- Overview of front and side panel 7
- Overview of back panel 8
- Overview of remote control 9
- Installing batteries in the remote control 12

External Connection 12
- Antenna connection 12
- Connecting VCR 13
- Connecting DVD Player/Set-Top Box 14
- Connecting DVD Player/Set-Top Box via HDMI 15
- Connecting a headphone 15
- Connecting PC 16

Supporting signals 16
Basic operation 17
- Turning the TV On and Off 17
- Menu operation 18

Table of Contents

Menu system introduction 19
- Video 19
- Audio 20
- TV 21
- Setup 22
- Caption 23
- Parental 24
- VGA 26

DVD Setup Menu 27
- Information 29

Troubleshooting 30

Introduction

Features

Input terminals used for external equipment connection

One computer VGA/PC input
One COMPONENT input
One AV input
One VGA/PC AUDIO input
One PHONE output
One HDMI input
One ANTENNA jack
One S-VIDEO input

Accessories

Please make sure the following items are included with your LCD TV. If any items are missing, contact your dealer.



Instructions Manual

Quick setup Guide



Warranty Card

Supporting DVD Format

This product can play the following DVD formats disc.

Disc Type	Disc Size (Diameter)	Recorded Time	Recorded Content	Remarks
DVD	12cm	Single side:120mins. Approx	DVD format: Compressed digital audio and video	
		Double side:240mins. Approx		
Super VCD	12cm	45mins. Approx	MPEG2 Compressed digital audio and video	Include SVCD
VCD	12cm	74mins. Approx	MPEG1 Compressed digital audio and video	Include: VCD2.0/ VCD1.1 VCD1.0/ DVCD
CD	12cm	74mins. Approx	CD-DA: Digital audio	
JPEG	12cm	600mins. Approx	Digital audio	

NOTE: Also supports DVD-R, CD-R, CD-RW playback.

WARNING! DO NOT INSERT OR PLAY 8CM DISC, THEY WILL GET STUCK.

Introduction

Specifications

Display size	13.3″	
Hative resolution	1280X800	
Sound output	2*2W	
Power consumption	24W	
TV receive system	NTSC/ATSC	
Antenna input impedance	75Ω(unbalance)	
Power supply for remote controller	DC 3V（Two AAA size batteries）	
Power consumption under Sleeping status	less than 3w	
Dimension (L*W*H)	350mmx116mmx280mm	
Operation environment Temperature	0℃-40℃	
Adapter requirement	In put	AC~100-240V 50/60Hz
	Out put	DC 12V 3A

Note:

1. Due to TV may be used with different display screen, weight marked in this user's manual or in packaging box are subject to change without notice.
2. In case of any design change, a notice will not be released.

General Description

Overview of front and side panel

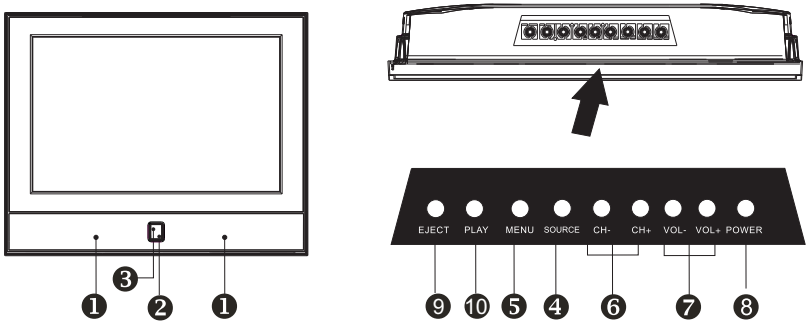

❶ SPEAKER

❷ REMOTE CONTROL SENSOR
Aim the remote control towards this spot on the TV.

❸ POWER INDICATOR
Green: In power on mode.
Red: In standby mode.

❹ SOURCE
Toggles between all the available input sources (TV,AV, S-VIDEO,YPBPR, VGA,HDMI, DVD)

❺ MENU
Press to see an on-screen menu of your TV's features.

❻ CH+/-
Press to change channels.
In the on-screen menu, use the CH +/- buttons as up/down arrow buttons.

❼ VOL+/-
Press to increase or decrease the volume.
In the on-screen menu, use the VOL +/- buttons as left/right arrow buttons.

❽ POWER button
Press POWER button to toggle between normal and standby mode.

❾ EJECT BUTTON(▲)
Press the EJECT button whenthe power is on the disc will eject. Put the disc in the slot slightly, with the data side facing towards you. Press EJECT button again the disc is pulled in automatically, and the unit starts playing automatically (Without auto play function for JPEG discs).

❿ PLAY AND PAUSE BUTTON(►/II)
Press this button to start playback. Press this button again to pause playback.

General Description

Overview of back panel

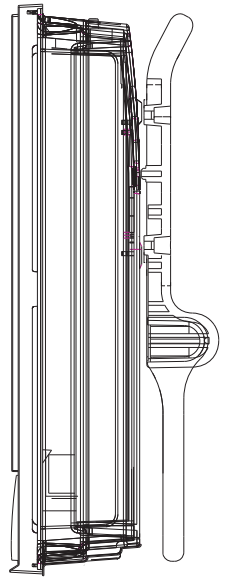

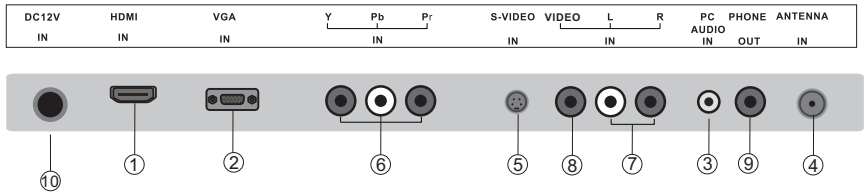

Terminal Introduction

1 HDMI IN
Connect to the HDMI jack of a device With an HDMI output

2 VGA/PC IN
Connect to the VGA output jack on your PC

3 PC AUDIO IN
Audio input for external devices

4 ANTENNA
Connect to an antenna or cable TV system.

5 S-VIDEO IN
Connect an S-VIDEO signal from a camcorder or VCR..

6 YPBPR
Connect component video.

7 YPBPR COMPONENT AUDIO
Audio inputs for external devices.

8 VIDEO
Video para aparatos externos tales como videocamaras o VCR.

9 PHONE OUT
Connect a set of phone for private listening

10 DC12V IN
Connect the supplied power

General Description

Overview of remote control

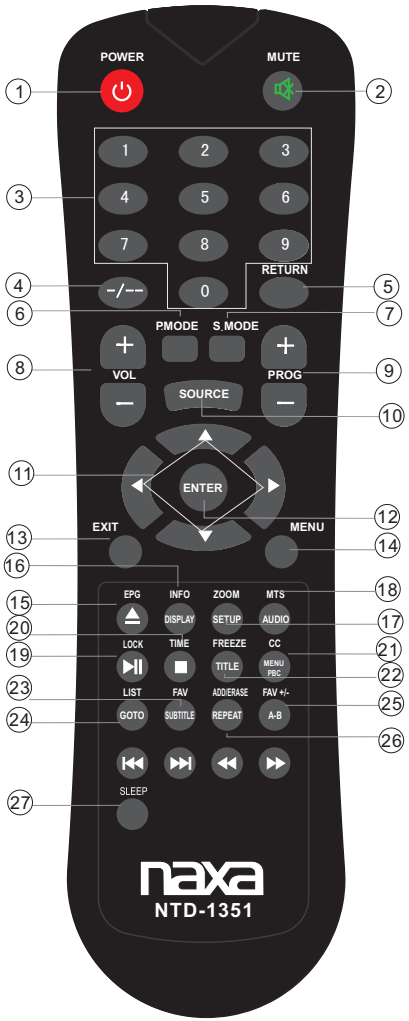

1. **POWER**:Switch an LCD TV when at standby mode or vice versa.
2. **MUTE**: Press to mute the sound. Press again or press VOL+ to unmute.
3. **Number key(0-9):** Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.
4. **-/--**: Press this button to enter a program number for multiple program channel such as 2-1,etc.
5. **RETURN:** Return to the previous channel viewed
6. **P.MODE:** Press repeatedly to cycle through the available video picture modes.
7. **S.MODE:** Press to cycle through the different sound settings.
8. **VOL +/-**: Press to increase/decrease the sound level.
9. **PROG +/-:** Press to scan through channels. To scan
10. **SOURCE**: Press to change input source.
11. **ARROW BUTTONS(▲/▼/◀/▶)**:Use to move cursor up/down/left/right.
12. **ENTER:** Validation key.
13. **EXIT**: Press to exit all menu.
14. **MENU**: TV system setup.
15. **EPG**:Press to display the EPG menu.
16. **INFO:** Displays the channel information
17. **ZOOM**:Press to change the screen scale.
18. **MTS**: Press to select the audio channels.
19. **LOCK:** Press to display the parental menu.
20. **Time**: Press to display Time menu.
21. **CC**: press to display the closed caption
22. **FREEZE:** Press to freeze the screen.
23. **FAV:** Selects faorite channels.
24. **LIST:** Press to display the TV program list.
25. **FAV +/-:** press this button +/-the favorite program list.
26. **ADD:** Add this program to the favorite channels list . **ERASE:**Delete this program from the favorite channels list .
27. **SLEEP:** Sets the sleep timer press the repeatedly to select sleep time among off, 5, 10, 15, 30, 45, 60, 90, 120, 180, 240.

General Description

Overview of remote control

DVD Mode :

When in DVD mode, use the arrows in the bottom section of the remote to operate the menus etc.

EJECT BUTTON(▲)

Press the EJECT button whenthe power is on the disc will eject. Put the disc in the slot slightly, with the data side facing towards you. Press EJECT button again the disc is pulled in automatically, and the unit starts playing automatically (Without auto play function for JPEG discs).

MENU PBC BUTTON

Press menu button and the screen will display “Root Menu”, select item according to your preference. (This button is valid to DVD disc possessing multilayer Menu). PBC button lets you play Video CDs,interactiv-ely. If PBC is on, you can use the number buttons to select tracks in the menu. If PBC is off, you can select the tracks directly.

AUDIO BUTTON

When play DVD, by pressing this button, you can change the audio language from the one selected at the initial settings to a different language, available.

REPEAT BUTTON(REP)

Press the REPEAT button one time, it repeats the chapter. Press it again and it repeats all chapters of the disc. Press REPEAT button one more time and the repeat function cancels.

A-B REPEAT BUTTON(REPA-B)

Press the A-B button once to set point A Press . the A-B button a second time to set point B. After setting the program repeat playing from A to B. Pressing the A-B button a third time will cancel the repeat.

TITLE BUTTON

Press TITLE button, there will have an screen indication “TITLE”.

Press the direction or numeric buttons to select your favourite title. Will play from the first chapter of the selected title.(for DVD disc only)

ENTER: Validation key. (bottom section of ENTER button for DVD function only)

ARROW BUTTONS (◀/▶/▲/▼):Use to move cursor up/down/left/right. (direction buttons of bottom section for DVD function only)

SUBTITLE: This function may enable you to select multi subtitle languages (as many as 32 kinds only for the discs with multi subtitles encoded). Press the SUBTITLE button to get desired display.

DISPLAY: Press display buttom to show the the information of the DVD player.

GO TO BUTTON

Press this button to go to desired position . The player provides 3 search mode.

On the remote control, the bottom section ARROW BUTTONS (◀/▶/▲/▼):Up and down buttons of the OSD menu, to change the OSD menu items; Left and right buttons of the OSD menu, to select the OSD menu items. (only for DVD function)

When the above items are showed on LCD screen, you can input numbers to locate desired sector.

The number you input is invalid if it is beyond the track’s capacity.

General Description

Overview of remote control

PLAY AND PAUSE BUTTON(▶/II)

Press this button to start playback. Press this button again to pause playback.

STOP BUTTON(■)

Press button once to stop. Press button to resume from where you stopped.

Press button Twice to stop. Press button to start from beginning. In order to protect the disc, press button then press EJECT button to take the disc out. When the disc is ejected, hold the disc edge to prevent scratches.

When not using the DVD function (in standby mode or using others modes for a long time), please take out the disc to protect the DVD loader and the disc.

PREV/NEXT BUTTON(I◄◄/►►I)

When playing a DVD disc, press PREV to play the previous chapter. when playing a SVCD, VCD, CD disc, press PREV to play the previous track.

When playing a DVD disc, press NEXT to play, the next chapter. when playing a SVCD, CD disc, press NEXT to PLAY the next track.

FR/FF BUTTON(◄◄/►►)

To Use Fast Forward or Fast Reverse:

1. When playing a DVD, press FF buuton to fast forward through the disc. Press FR button to fast reverse through the disc.

2. Press PLAY button to resume normal playback.

SETUP BUTTON

Press this button to get the setup menu . you can select the setting as you like .

General Description

Installing Batteries in the Remote Control

Installing Batteries

1 Open the battery compartment cover on the back side.

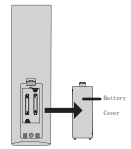

2 Insert two 1.5V AAA size batteries in correct polarity. Don´t mix old or used batteries with new ones.

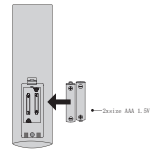

3 Closed the cover.

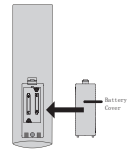

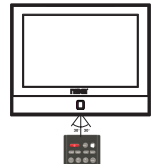

- Point the remote towards the remote control sensor of the wireless TV and use it within 7 meters.
- Put the used batteries into the recycling bin since it can negatively affect the environment.

Note:

- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Universal Remote Control operation please refer to Appendix 2.

External Connection

Antenna connection

Antenna input impedance of this unit is 75ohm. VHF/UHF 75ohm coaxial cable can be connected to the antenna jack directly, if the antenna cable is 300ohm parallel flat feeder cable, you need to use the 300ohm/75ohm converter to connect the antenna cable to the antenna jack. For details Please refer to the following drawing.

Antennas with 300 Ω flat twins Leads

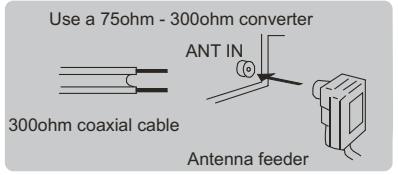

Antennas with 75 Ω Round Leads

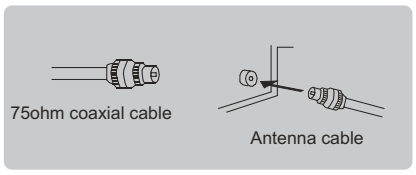

External Connection

Connecting VCR

These instructions assume that you have already connected your TV to an antenna or a cable TV system. Skip step 1 if you have not yet connected to an antenna or a cable system.

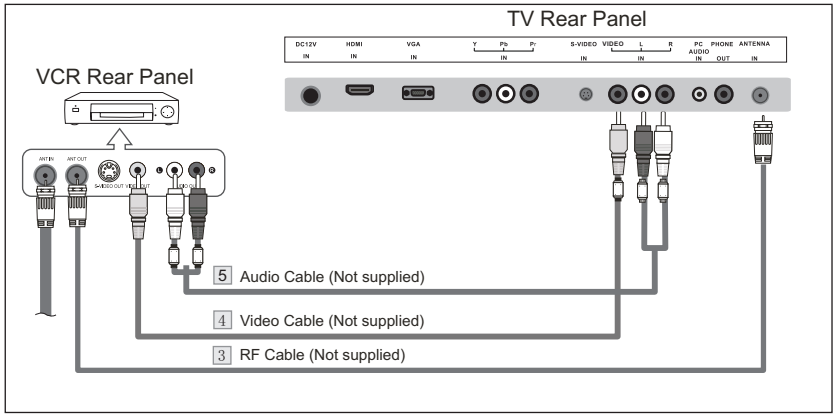

Follow the instructions in Viewing a VCR or Camcorder Tape to view your VCR tape.
Each VCR has a different back panel configuration.
When connecting a VCR, match the color of the connection terminal to the cable.
We recommend the use of cables with a Ferrite Core.

1. Unplug the cable or antenna from the back of the TV.
2. Connect the cable or antenna to the ANT IN terminal on the back of the VCR.
3. Connect an RF Cable between the ANT OUT terminal on the VCR and the ANT IN terminal on the TV.
4. Connect a Video Cable between the VIDEO OUT jack on the VCR and the VIDEO IN jack on the TV.
5. Connect Audio Cables between the AUDIO OUT jacks on the VCR and the AUDIO L and AUDIO R jacks on the TV.
   - If you have a mono (non-stereo) VCR, use a Y-connector (not supplied) to hook up to the right and left audio input jacks of the TV. If your VCR is stereo, you must connect two cables.

External Connection

Connecting DVD Player/Set-Top Box

The rear panel jacks on your TV make it easy to connect a DVD to your TV.

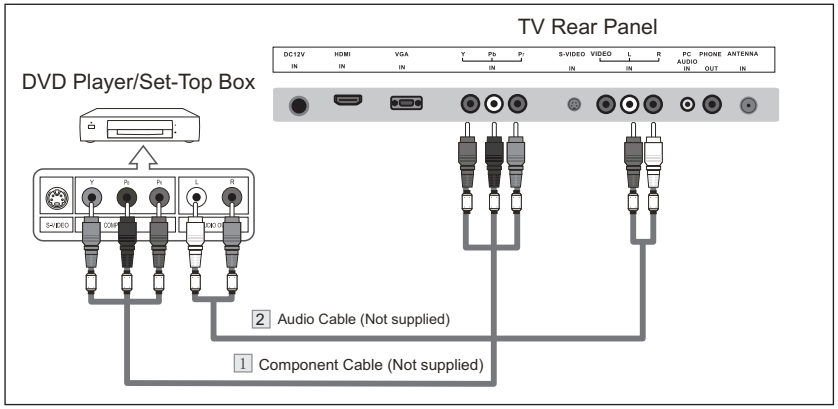

Component video separates the video into Y (Luminance (brightness)), Pb (Blue) and Pr (Red) for enhanced video quality.
Be sure to match the component video and audio connections.
For example, if connecting the video cable to COMPONENT IN, connect the audio cable to COMPONENT IN also.
Each DVD player/STB has a different back panel configuration.
When connecting a DVD player/STB, match the color of the connection terminal to the cable.
We recommend the use of cables with a Ferrite Core.

1. Connect a Component Cable between the COMPONENT IN [Y, PB, PR] jacks on the TV and the COMPONENT [Y, PB, PR] jacks on the DVD player.
2. Connect Audio Cables between the COMPONENT IN [RAUDIO-L] jacks on the TV and the AUDIO OUT jacks on the DVD player.

External Connection

Connecting DVD Player/Set-Top Box via HDMI

This connection can only be made if there is a HDMI Output connector on the external device.

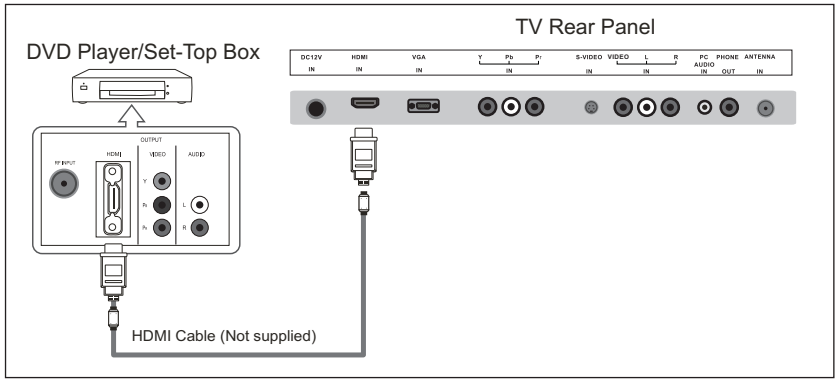

What is HDMI?

HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression.

Multimedia interface is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels).

The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP(High Bandwidth Digital Copy Protection) coding feature installed, and supports multi-channel digital audio.

Each DVD player/STB has a different back panel configuration.

We recommend the use of cables with a Ferrite Core.

1. Connect an HDMI Cable between the HDMI connector on the TV and the HDMI connector on the DVD player/Set-Top Box.

Connecting a Headphone

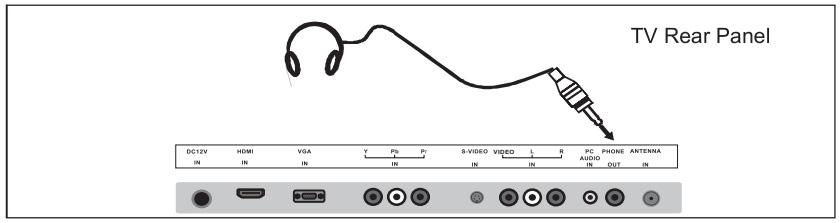

Plug headphone connector into headphone jack on the TV.Then the TV speaker will be muted.

External Connection

Connecting PC

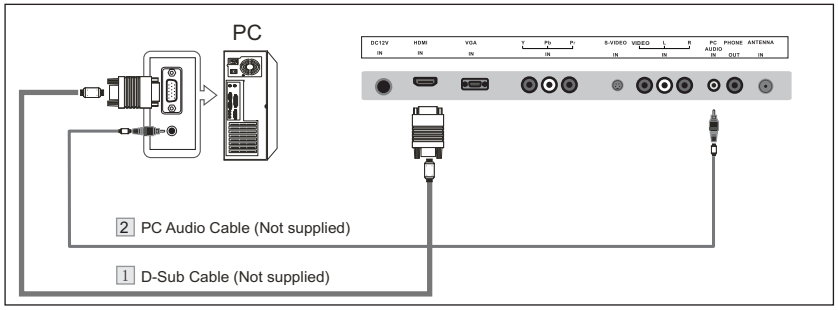

Each PC has a different back panel configuration.

The HDMI jacks do not support PC connection.

We recommend the use of cables with a Ferrite Core.

1. Connect a D-Sub Cable between RGB/PC IN connector on the TV and the PC output connector on your computer.
2. Connect a PC Audio Cable between PC AUDIO IN jack on the TV and the Audio Out jack of the soundcard on your computer.

Supporting signals

Input	Mode
Air	8VSB
Cable	Free64/256QAM
CVBS	NTSC3.58
S-Video	NTSC3.58

Input	Resolution	VerticalFrequency
YPBPR	480p	60Hz
	720p	60Hz
	1080i	60Hz
	1080p	60Hz
HDMI	480p	60Hz
	720p	60Hz
	1080i	60Hz
	1080p	60Hz

Input	Resolution	VerticalFrequency
PC/VGA	640x480	60Hz
	800X600	60Hz
	1024X768	60Hz
	1280X800	60Hz

Turning the TV On and Off

1 *How to turn the TV on or off*

1. Connect the small round plug on the power adaptor cable to the power DC 12V input socket on the side panel of the TV, connect the mains cable between the power adaptor and mains supply.

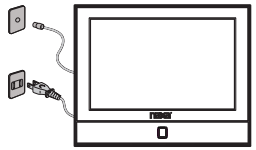

2. Press **POWER** button on the remote control or ⏻ button on the LCD TV.

3. Normal picture will be displayed on the screen after 6 seconds. If no signal input, "No Signal" will be displayed on the screen.

4. If temporary POWER off is required, press **POWER** button on the remote control or ⏻ button on the LCD TV.

5. If you want to completely switch off the power for this unit, unplug the power cord plug for this unit.

6. After switching off the unit, you should turn on the TV again at least 5 seconds later.

Status indication lamp
Green: In power on mode.
Red: In standby mode.

Auto power-off
If there is no signal input in any Mode, the TV will automatically accesses the standby state in about 15 minutes.

Memory before turning TV off
The settings of picture and the preset channels will be memorized at turning off the unit. When being started up again, the unit will work according to the mode set before being turned off.

Menu operation

1 Select the input source

You can dispaly the input source menu by pressing the **SOURCE** on the remote control or **SOURCE** on the front panel, press ▲/▼ button to select, press "**ENTER**" button to confirm.

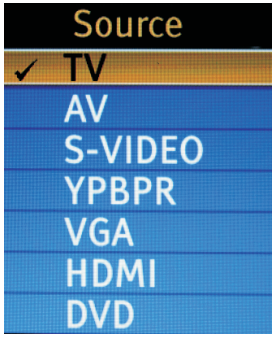

2 *Volume Adjustment and Mute Setup*

Volume adjustment
Press **VOL +/-** key on the remote control or on the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using **VOL +/-** key:
（ To increase the volume, press **VOL** + key;
（ To decrease the volume, press **VOL -** key;

Mute
Press **MUTE** key on the remote control to display mute icon on the left bottom of the screen, and the volume of TV will be turned off, press **MUTE** key again to turn on the volume. Mute can be canceled by using one of the methods below:

（ Mute will be canceled if you press **MUTE** button again.
（ Mute will be canceled if you press **VOL** + key.

VIDEO

VIDEO

Press the MENU on the front panel or MENU on the remote control and then use ▲/▼ to select the Video menu, press ENTER button to enter it(see the picture below).

1. Use▲/▼ to select what you want to adjust in the Video menu.
2. Press **ENTER** or ▶ button to adjust(according to the hint below).

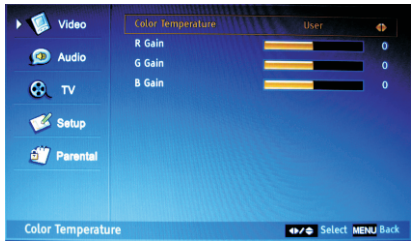

Picture Mode

Select the type of picture which best corresponds to your viewing requirements by selecting Picture Mode in **PICTURE MODE** menu. You may select the picture mode directly by pressing the ◄/► button on the remote control.

Brightness

Press▲/▼button and then use ◄/► to adjust the brightness of the picture.

Contrast

Press▲/▼button and then use ◄/► to adjust the contrast of the picture.

Colour

Press▲/▼button and then use ◄/► to adjust the contrast of the picture.

Tint

press ▲/ ▼button and then use ◄/► to adjust the tint of the picture.

Sharpness

Press▲/▼button and then use ◄/► to adjust the sharpness level of picture.

Color Temperature

Press "**ENTER**" to enter the submenu. Color Temperature: press▲/▼button to select the mode ------User, Cool, Standard, Warm And the "R Gain, G Gain, B Gain" numbers in "User" mode is set by yourself.

DNR

Press▲/▼button to select DNR , then press ◄/►button to select .

Audio

Audio

Press the MENU on the front panel or MENU on the remote control and then use ▲/▼ to select the AUDIO menu, press ► or ENTER button to enter it(see the picture below).

1. Use ▲/▼to select what you want to adjust in the Audio menu.
2. Press **ENTER** or ◄ / ► button to adjust(according to the hint below).
3. When you are satisfied with your adjustment, press **MENU**.

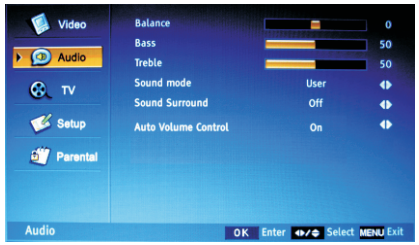

Audio Mode

You can select the type of sound which best corresponds to your listening requirements by selecting Sound in Audio menu. You may select the sound mode directly by pressing the ◄/► button on the remote control.

Balance

Press◄/►button and then use ◄/► to adjust the audio output between left and right speakers.

Bass

Press◄/► button and then use ◄/► to increase or decrease the level of the lower-pitched sounds.

Treble

Press▲/▼button and then use ◄/► to increase or decrease the level of the higher-pitched sounds

Sound mode

Press ▲/▼button to select **sound mode**, then press ◄/► button to select .

Sound Surround

Press ▲/▼ button to select **Sound Surround**, then press ◄/► button to select “on” or “off” .

Auto Volume Control

Press ▲/▼button to select **Auto Volume Control**, then press ◄/► button to select “on” or “off” .

TV

TV menu options

Press the MENU on the front panel or MENU on the remote control and then use▲/▼to select the TV menu, press ► or ENTER button to enter it(see the picture below).

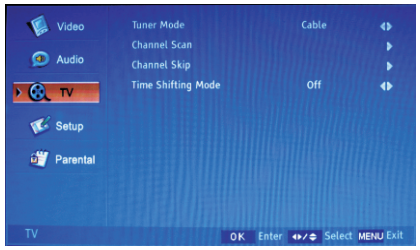

1. Use▲/▼ to select what you want to adjust in the TV menu.
2. Press **ENTER** or ◄/► button to adjust(according to the hint below).
3. When you are satisfied with your adjustment, press **MENU**.

Tuner Mode

You can select the signal input mode: Antenna, Cable.

Channel Scan

Select Channel Scan press **ENTER** button to start the channel scan. Press **MENU** to stop or it will not stop until the scan is finished.

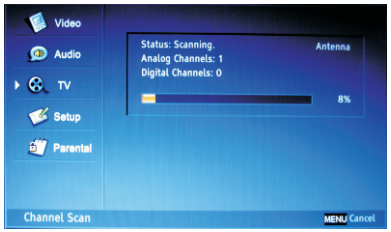

Channel Skip

Select Channel Skip press **ENTER** button to enter the submenu.

Time shifting Mode

press ▲/▼ button to select Time shifting Mode, then press ◄/► button to select.

Setup

Setup menu options

Press the MENU on the front panel or MENU on the remote control and then use▲/▼ to select the Setup menu, press ► or ENTER button to enter it(see the picture below).

1. Use ▲/▼to select what you want to adjust in the Setup menu.
2. Press **ENTER** or ◄/► button to adjust(according to the hint below).
3. When you are satisfied with your adjustment, press **MENU**.

OSD Language

Press ◄/► to select language of the OSD menu .

Screen mode

Press ◄/► to select Screen of the mode menu .

OSD Transpdrency

Press◄/► to select language of the “**OSD Transpdrency**” menu.

Time Setup

Select **Time Setup** Press **ENTER** button to enter the submenu.

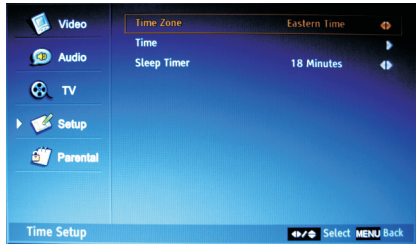

Time

Press◄/►button to select time ,then press button to enter input “Date” and “Time”

When Auto Synchronization is in “off” status and input “power on Timer”and “Power off timer ” when Timer is in “on” status.

Caption

Sleep Timer

Press▲/▼button to select Sleep Timer, then press◄/► button to select different Timer .

Caption
Press▲/▼ button to select **Caption** , then press ► button to enter.

Anudlog Closed Caption
Press ▲/▼button to select **Anudlog Closed Caption** , then press◄/►button to select .

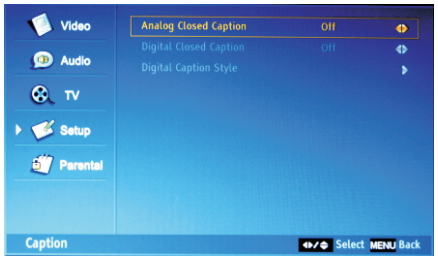

Reset Default
Press ▲/▼button to select **Reset Default,** then press ► buttion to enter.

Parental

Parental menu options

Press the MENU on the front panel or MENU on the remote control and then use▲/▼ to select the Parental menu, press ► or ENTER button to enter it(see the picture below).

Enter the code **0000** to enter the parental menu(see the picture below), or press **MENU** to cancel.

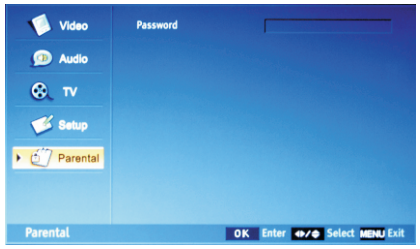

Program Block
Press ▲/▼button to select **Program Block,** then press ► button to enter.

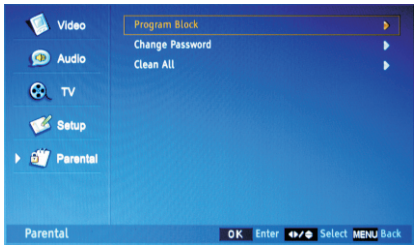

Rating Enable
Press ▲/▼button to select **Rating Enable,** then press◄/►button to select “on” or “off”.

Menu system instruction

Parental

Press ▲/▼ button to select On/Off, when you select Off, the others below are disable and can not be adjusted.

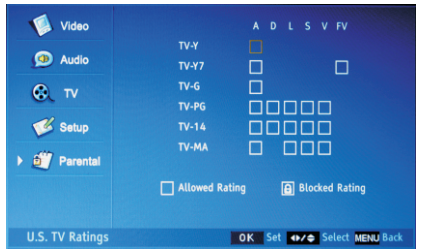

U.S. TV Ratings

Press ▶ button to enter, and use ▲/▼ ◀/▶ button to select, and press **ENTER** button to confirm.

U.S. Movie Ratings

Press ▶ button to enter, and use ▲/▼ ◀/▶ button to select, and press **ENTER** button to confirm.

Canadian English Ratings

Press ▶ button to enter, and use ▲/▼ ◀/▶ button to select, and press **ENTER** button to confirm.

Canadian French Ratings

Press ▶ button to enter, and use ▲/▼ ◀/▶ button to select, and press **ENTER** button to confirm.

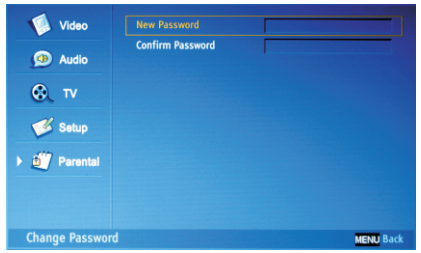

Change Password:

Select Change password press ▶ button to enter the submenu, and change the password and you like or press Menu to cancel.

Clean All:

Press ▲/▼button to select **Clean All,** then press ▶ button to enter.

Press▲/▼ button to select **"OK"** or **"Cancel".**



Menu system instruction

VGA

VGA

Press the MENU on the front panel or MENU on the remote control and then use ▲/▼ to select the VGA menu, press ▶ or ENTER button to enter it(see the picture below

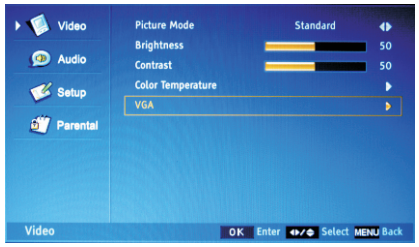

1. Use ▲/▼to select what you want to adjust in the VGA menu.
2. Press **ENTER** or ▶ button to adjust(according to the hint below).
3. When you are satisfied with your adjustment, press **MENU**.

- AUTO ADJUST：Press ◀/▶to automatically adjust the picture .
- H-POSITION：Adjust the horizontal position of the image by ◀/▶ .
- V-POSITON：Adjust the vertical position of the image by ◀/▶ .
- PHASE：Adjust the Sampling phase by ◀/▶ .
- CLOCK：Adjust the Sampling frequency by ◀/▶ .

DVD Setup Menu Interface Function

Press the DVD Setup button to activate the DVD player OSD menu, the DVD setting menu by the romote control the bottom section arrow buttons and ENTER button. press the Left/Right arrow buttons to move between the different sub-menus; press the Up/Down arrow buttons to highlight the prefered option, confirm with the ENTER button. Press the DVD setup button to exit the OSD menu.

General Settings page

1. TV DISPLAY: Set the ratio of output to the television signal options are:

   Normal/PS(4:3 Pan Scan),Nomal/PS (4:3 Leiter Box),Wide,The current default settings is wide.

2. OSD Lang : Set the OSD language options.

3. CAPTIONS :Play the enclosed captions on some DVD titles,Optional settings:ON/OFF.

4. LAST MEMORY:Save the last set to open with the related options are: On/ Off.

   If this function is enabled, it allows you to continue the playback of a film (DVD) even after switching off or remove of a disk. The player stores all settings like play position or used language and continues playback with these settings after the disk is reinserted.

   This function will be enabled or disabled via the setup-menu of the DVD-player.

Audio Setup Page

1.LT/RT: Logic Surround stereo audio output. This matrix-based coding process enables stereo audio tracks to carry four channels (left,center,right and surround) of audio data.

2.Stereo: Analog stereo audio output .The player sends the subwoofer and speech signals to your front right and front left speakers.

Preference Page

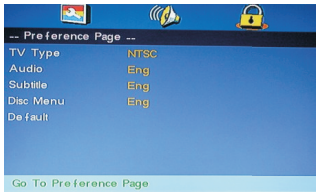

1. TV Type: This product supports output of various system, including AUTO, NTSC, PAL.

   PAL: Choose this settings if your DVD player is connected to a PAL TV. The default setting is PAL; NTSC: Choose this settings if your DVD player is conn -ected to a NTSC TV. AUTO: Choose this settings if your DVD player is connected to a multi-system TV.

   For more information of output format, refer to the instruction of your DVD player.

2. Audio: DVD built-in disc dubbing language selection options.

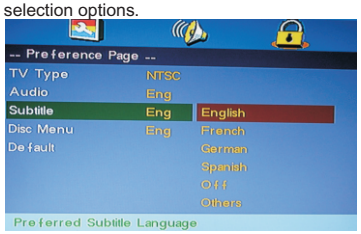

3. Subtitle: This player provides English etc. languages as the built-in subtitle language, when playing DVD, user may hide the subtitle or choose any of them as the present subtitle language.

4. Disc menu: DVD Disc language selection options.

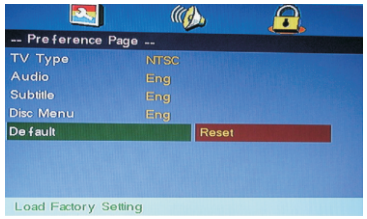

5. Default: This option will resume the original settings of this player.

Information

Things to Consider before Setting Up Parental Control

Determine which rating you consider acceptable to the viewer. (For example, if you choose TV-PG, all more restrictive ratings will be automatically blocked; the viewer will not be able to see: TV-PG, TV-14, or TV-MA rated programming.)

Do you want to block the auxiliary video source entirely (Blocks the signal sent by the equipment, such as a VCR, connected to the TV Audio/Video input jacks) Or leave unblocked, then choose allowable ratings. Block program content based on individual parameters such as: Strong Dialog, Bad Language, Sex Scenes, Violence Scenes, or Fantasy Violence Scenes; in the Content Blk option.

Select a secret password; in the Set Password option. Use the number keys on the remote. Dont forget the password, it is t he only way you can access the Parental Control menu and change rating selections, or turn Parental Control off.

Do you want Parental Control to be active all the time? If not, you can turn it on or off with the Lock On/Off option.

* You can set different Parental Control viewing restrictions for general audiences and for children both can be active at the same time.

* Simply specifying one content block such as Sex Scenes, will not automatically block another content in the programs from appearing.

* Even if you choose to leave the Aux inputs unblocked, the ratings you specify will automatically restrict the programming that appears from the video sources.

* You can not disable Parental Control by disconnecting the TV from power. Block hours will automatically reset to the original block time setting specified if power is disconnected.

MOTION PICTURE ASSOCIATION OF USA (MPAA) RATING SYSTEM

Grade		Meaning
G	General Audiences	Content not offensive to most viewers
PG	Parental Guidance Suggested	Content is such that parents may not want their children toview the program.
PG-13	Parental Strongly Cautioned	Program is inappropriate for preteens, with a greater degree of offensive material Suggested than a PG rated program
R	Restricted viewing	Not for children under age 17.Strong elements of sex and/or violence.
NC-17	No Children under age 17	Not for children under age 17 under any circumstances.Strong sexual content.
X	Hard Core Films	Same as NC-17 rating.
NO RATING	No Rating	MPAA Not Rated

Troubleshooting

If you have any problem, check the countermeasures for each symptom listed below. The following symptoms may have caused by inappropriate adjustment rather than actual malfunction of the unit. If the trouble persists, contact the service center.

Symptoms	Possible solutions
No power	Please check the power cord is plug in. Unplug the power cord and plug it after 60 seconds and restart the TV.
No picture	Please check antenna connection. Station may experience problems, please tune to another station. Please adjust the settings of contrast and brightness.
Good picture but no sound	Please increase the volume. Please check TV is under mute mode, press **MUTE** button on the remote control. Please check sound settings.
Good sound but abnormal color or no picture	Please check the antenna connection.
No remote control	Batteries of remote control may have exhausted, if necessary, please change the batteries. Clean the remote control lens. The distance between LCD TV and remote control should be within 8m.
Full screen flickering under VGA	V-HEIGHT value may be set too big, restart computer and enter safe mode, then set monitor parameters to correct value according to adjustment description.
Horizontal stripes under VGA	Sample phase may be deflected, adjust phase according to picture position.
Colored dots may be present on the screen	This product is the high resolution LCD display device and a few cell defects can occur in the manufacture of the LCD. Several colored dots visible on the screen would be acceptable. in line with other LCD manufacturers and would not mean that the LCD is faulty. We hope you will understand that it could not be changed or refunded.

For Sales Information Please Contact

RoadTrucker Inc (www.RoadTrucker.com
8312 Sidbury Rd.
Wilmington, NC 28411
(800) 507-0482 / (910) 686-4281